



**Healthaire™**

**SUPERVENTILATION**

*Creating Healthy Homes*

**OPERATING INSTRUCTIONS**

**Healthaire Ltd**

T: (09) 376 2822 F: (09) 360 3480

PO Box 47 161 Ponsonby, Auckland

Email: [clean@healthaire.co.nz](mailto:clean@healthaire.co.nz)

Website: [www.healthaire.co.nz](http://www.healthaire.co.nz)

Date ... /.../... Chip No.....

Address \_\_\_\_\_

**Healthaire sets itself.** (User control of: “Off” and “Half Speed” operate for up to 8 hours)

**On the Wall Controller,**

- 1) **Short** Press of button to turn Healthaire on.  
(Healthaire when started always runs in “Manual” for 30 minutes and then switches to “Automatic”)
- 2) Once running, **short** press again to select half speed.  
(Each short press will toggle between half and full speed)
- 3) To turn Healthaire off, press and hold until all the lights go out.  
(This takes 1 second)
- 4) Repeat 1) to turn on again.
- 5) **CAT (Controlled Air Transfer)** (if installed).  
Short Press of button twice quickly, to set CAT on. Repeat to turn off.  
CAT will also cancel when the heat from the fire reduces enough.

**Explanation of the two lights.**

The **TOP** light is **RED** only and indicates three conditions:

- 1/ “Fan on” when lit, **steady light** means Automatic. (“Fan off” = light out)
- 2/ “Half speed” **blipping light** every 2 seconds.
- 3/ Manual overrides the automatic control, indicated by the **light switching off and on every second.**

Note: The half speed blip/s are present in 1) and 5) when selected.

The **BOTTOM** light can be **RED, GREEN, or ORANGE** and indicates three conditions:

- 1] When Healthaire is ON, the light is steady red or green.  
(**RED** = warmer in ceiling space than the home)  
(**GREEN** = cooler in ceiling space than the home)  
(**ORANGE** = CAT is set when light is steady).
- 2] AutoCool mode is indicated by the opposite colour every 5 sec for ¼ second.  
Eg. If steady **RED**, then **GREEN** is displayed for ¼ sec and vice versa.
- 3] When Healthaire is OFF the light is out. Except that every 5 seconds, one or two **orange** flashes, followed by one or two **red** or **green** flashes, as in 1] above.

**DEFAULT SETTINGS:**

“Unit off” and “Half speed” reset to “On” and “Full speed” after 8 hours.

“Anti-condensation Mode” and “Year Round Auto” are both set.

There are also several other automatic features in the default setting.

**Product Guarantee:** Healthaire to be installed at the above address is unconditionally guaranteed against fault or failure for a period of three years from the date of installation. The Purchaser/s accept that such a guarantee does not cover any costs arising from malicious or accidental damage. The Purchaser/s accept that the guarantee does not cover filter replacement when required.